



C6 Billet / Stainless Steel Exhaust Plate INSTRUCTIONS

Step One: Locate bracket screws (2) directly above mufflers. (see figure 1)

Step Two: Remove both screws (see figure 2)

Step Three: Move one of two brackets outwards and align the screw holes on the other bracket. Re-fasten screw into bracket only fastening it half way into the hole.

Step Four: Take exhaust plate and slide the upper part of the plate over the exposed screw. Do not fasten screw completely yet. Repeat steps 3-4 for the other bracket. (see figure 3)

Step Five: After the exhaust plate is in position with the stock screws, move the exhaust plate left or right in order to center it between the exhaust tips. (see figure 4).

Step Six: Once the exhaust plate is centered to your liking, fasten the bracket screws securely to avoid any rattling sounds.

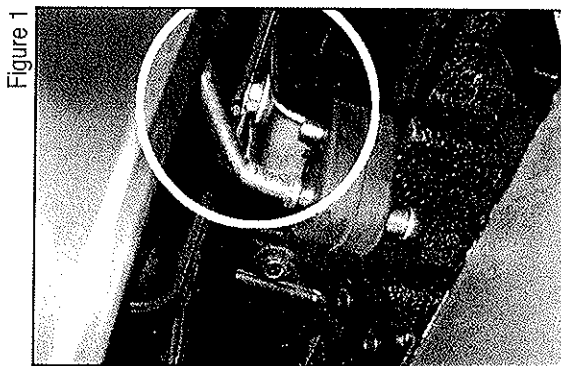


Figure 1

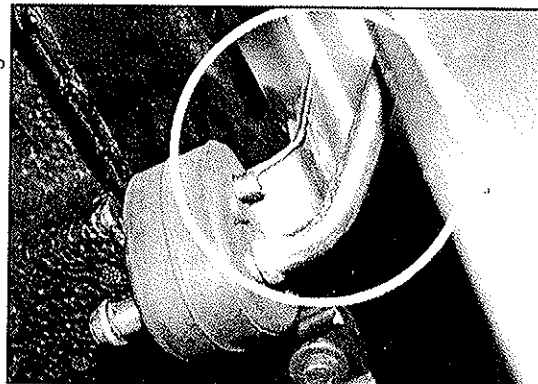


Figure 2

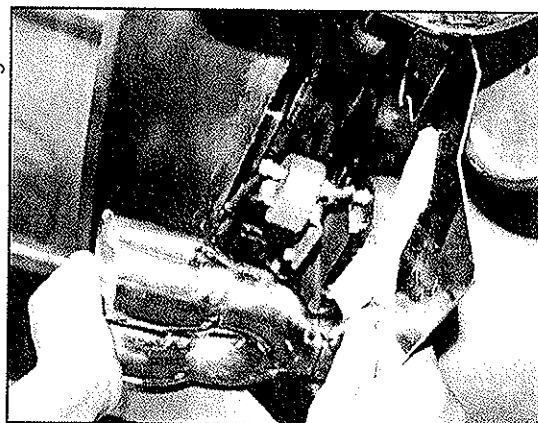


Figure 3


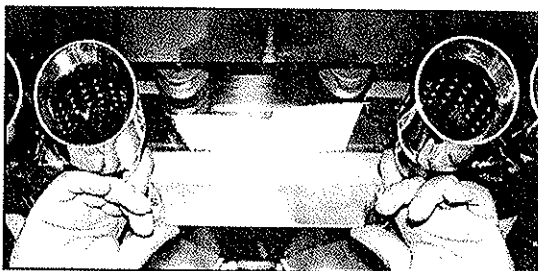


Figure 4

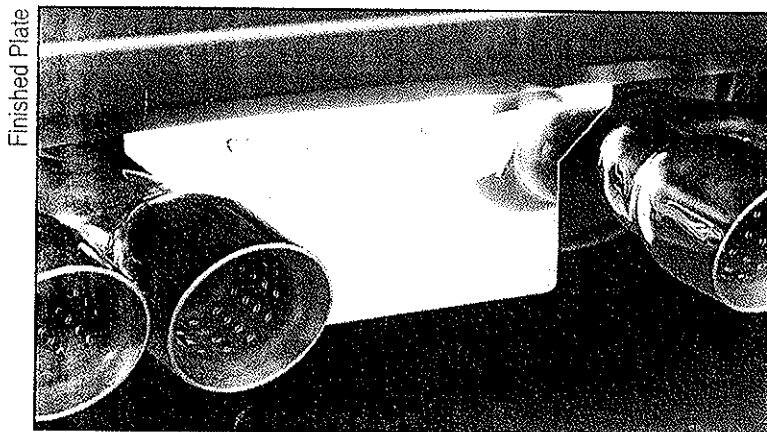

Tel: 714-630-6396 • Fax: 714 630-1422
Toll Free: 1-888-737-8388
www.westcoastcorvette.com